


Immobiliser Bypass Fitting Guide.

S1 . The Immobiliser Module can be located at the rear left hand side of the engine bay under a plastic cover on the mounting plate for the ECU (No.3 on diagram below), disconnect the module and plug the bypass connector in to the loom.

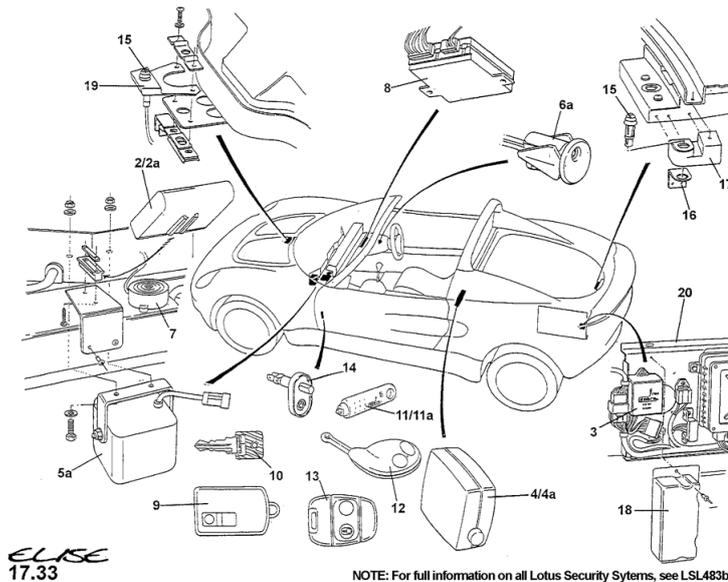

S2. The Module is located behind the speaker panel on the passenger side as pictured below (No.1/2/4)

