


BONNET STAY KIT

Open front bonnet & keep open by usual method.

Remove right hand dome headed bolt from bonnet catch & bolt on new cup washer using the countersunk bolt provided.



After viewing the pictures mark where you would like the parts to sit (double check all fits and bonnet closes without any interruptions).

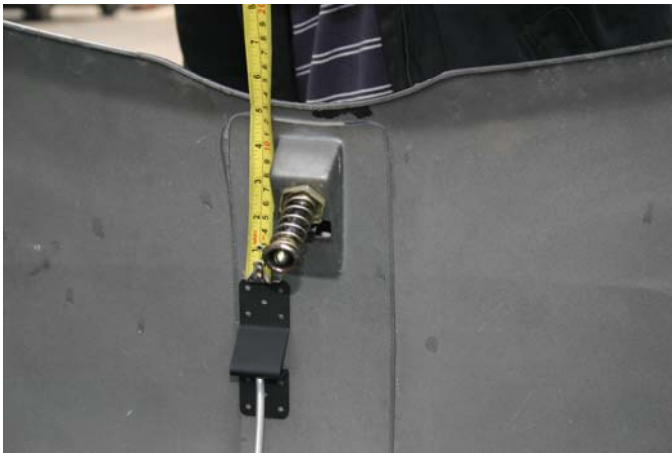

Once 100% satisfied where the plastic clip is to go clean the local area and fix the clip to the bonnet.

Push the aluminium rod through the triangular piece.

Using the glove provided glue the black aluminium piece as shown in the pictures above (clean area 1st).let the adhesive neatly seep through the holes in the black piece and smooth down as this helps adhesion.

Use masking tape over the top of the triangular piece to stop it from falling off whilst adhesive is setting.

Clip the aluminium rod into the plastic clip to help keep all straight.



Leave for 24hrs to completely dry.

NB* THIS PROCEDURE MUST BE DONE IN WARM AND DRY CONDITIONS OTHERWISE THE PLASTIC ADHESIVE ON THE CLIP WILL NOT STICK.

