


ELISEPARTS SHORTSHIFTER

The **Eliseparts** Shortshifter has been designed for easy fitment. It should take less than an hour to install.

Please check the contents list before installation proceeds and read the instructions carefully **prior** to fitment.

You will require the following tools

1. small socket set (10mm required)
2. 3mm & 5mm Allen keys
3. Phillips & flat head screwdrivers
4. Thread lock glue (locktite or similar)

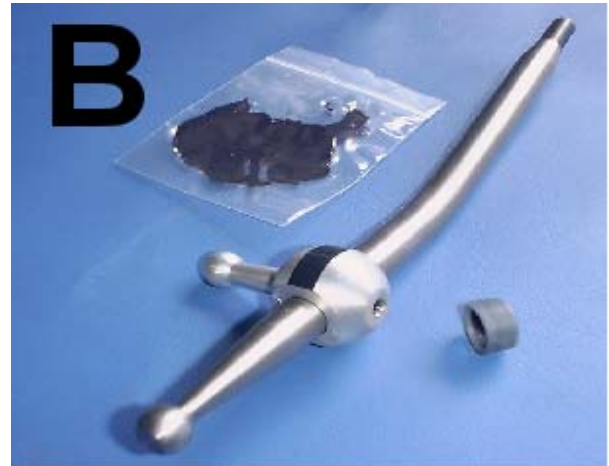


Contents:

- 1/. Shortshifter gear stick
- 2/. Aluminium swivel joint
- 3/. Grub screw
- 4/. Plastic pivot bush

Remove gear knob these are usually tight (if using Mole grips or pipe pliers don't forget to protect the knob with rubber or some material).

Remove gear console plastic screws and lift the gear lever cover over the gear stick. (There is probably no need to remove the cigar lighter wiring but if you do please note which way round the wires go).


Remove clip **(A)** and release pivot.

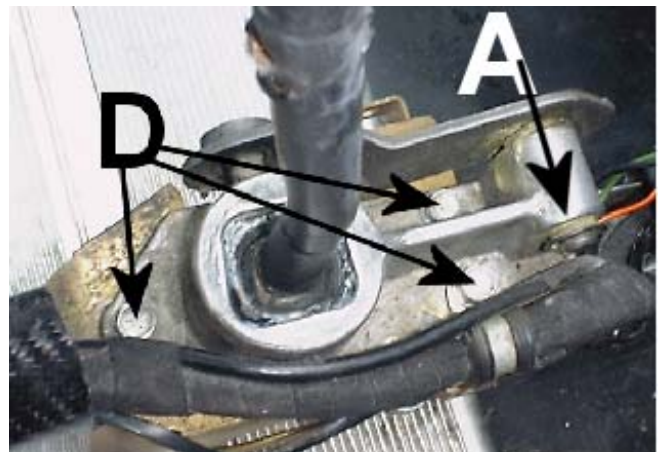

Unsnap plastic cable end **(C)** from the bottom of the gear lever

Remove the three (10mm head) bolts **(D)** from the base of the gear lever and lift out the lever mechanism and base.

Remove lever from the base unit leaving the top half of the plastic cup in place.

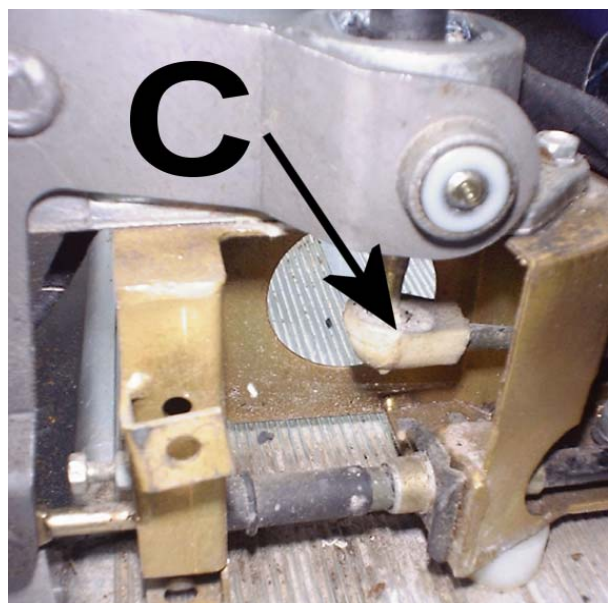

Choose a position for your quick shifter (there are three to choose from).

1. Right hand drive bias
2. Central position
3. Left hand drive bias

Once chosen and tested, it is preferable that the grub screw provided is thread locked in position.


Using plenty of the molybdenum grease provided, lubricate all moving pivots and plastic cup areas

Re-insert the now built-up quick shifter **(B)** unit back into the shifter base unit.

Re-affix the base using the opposite method of removal.

Attach the plastic cable end **(C)** to the bottom pivot on the gear lever making sure it is fixed **SECURELY**.

Before fitting the gear lever cover, try all gear positions carefully.

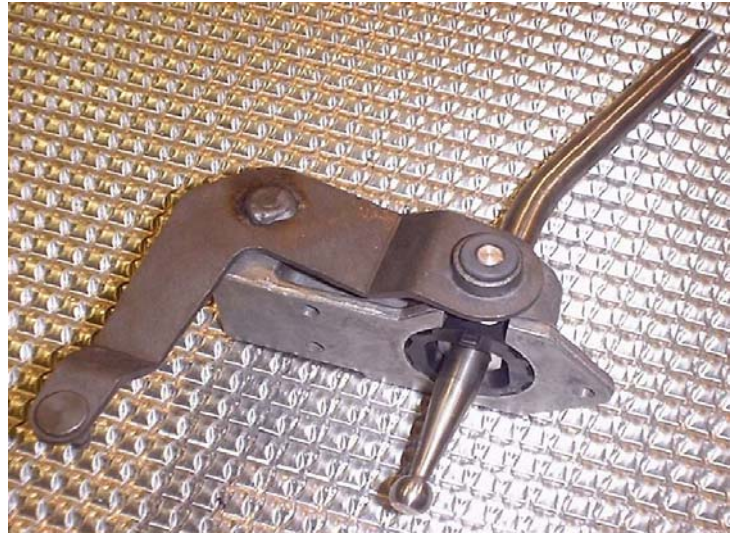

Do not start or drive the car until you totally satisfied.

